

DANCOVER[®]



Manual for
Happyhop Bouncer



■ INFLATABLE BOUNCER

KEEP THE INSTALLATION INSTRUCTION FOR FURTHER REFERENCE

PLEASE READ ALL OF THE SAFETY RULES BEFORE SETTING UP

WE BELIEVE IN SAFETY FIRST. PLEASE FOLLOW ALL OF THE RULES FOR YOUR CHILDREN'S SAFETY

WARNING! ELECTRICALLY OPERATED PRODUCT

ADULT SUPERVISION REQUIRED. OPERATING BLOWER (AIR PUMP) NOT RECOMMENDED FOR CHILDREN UNDER 16 YEARS OF AGE. AS WITH ALL ELECTRIC PRODUCTS, PRECAUTIONS SHOULD BE OBSERVED DURING HANDLING AND USE TO PREVENT ELECTRIC SHOCK.

CAUTION:

NOT SUITABLE FOR ADULTS

ADULTS MUST NOT USE THIS PRODUCT

NOT SUITABLE FOR HIRING OR COMMERCIAL USE

ADULT SET-UP REQUIRED

ADULT SUPERVISION REQUIRED

WARNING! ONLY FOR DOMESTIC USE. OUTDOOR USE

TO BE USED ON SOFT GROUND ONLY



 
Not suitable for children under 3 years. Small parts may be swallowed.

Key information for users

Age range	Maximum individual weight	Maximum total weight	Maximum children at a time	Minimum individual height	Maximum individual height	For item no.	Item purchased
3-10 years	45kg	90kg	2	90cm	150cm	92,01, 9314	
	45kg	113kg	3	90cm	150cm	9017	
	45kg	135kg	3	90cm	150cm	9112, 9171, 9214	
	45kg	180kg	4	90cm	150cm	9160	


SET-UP

- Check the ground where the product will be set up for any sharp objects or debris. Do not install the product over concrete or any hard surface.
- Place the product on a soft level surface at least 2 meters from any structure or obstruction such as a fence, garage, and house, overhanging branches, laundry lines or electrical wires.
- Ensure the play area is free from hazards such as furniture, walls, sharp objects, other hard surfaces, etc.
- Set up the product away from water and any potential fire hazards.
- Keep the blower(air pump) and power cord away from areas of water and moisture. If water contacts the blower(air pump),unplug the blower(air pump)power cord. Do not operate until the blower is completely dry.
- Remove the product from the carry bag. If any, ensure the slide cover coming with the product stretches well from top to end. Be sure to place the product as close to the power source as possible.
- Stretch the inflation tube and attach it to the end of the blower(air pump). Ensure the inflation tube is securely attached and in good condition. The inflation tube should be straight and untwisted. Reposition the blower (air pump) if necessary.
- If the product comes with water bags, like item #9082N, please follow the undermentioned instruction, otherwise, overleap this point. Spread out the product, place and fasten the empty water bags at the two sides of the product. Open the stopple and fill water in the water bags until 80% full (about 22kg), push and close the stopple. Make sure water bags are firmly attached on the product and no water leakage before the product is fully inflated, and never allow children to play on the slide without installing water bags.(refer to picture A)
- Push ground stakes through blower base holes. You may need to use a hammer for proper placement.
- Make sure the blower (air pump) power switch is in the OFF position. Ensure the power connections are safely sited and tripping hazard is minimized.
- The blower(air pump) should be securely sited and affixed to the ground before use. Plug the blower (air pump) into an approved ground outlet.
- Ensure the blower(air pump) is free from debris and securely sited to avoid tripping.
- Turn the blower (air pump) power switch to ON. The continual air-flow blower(air pump) must be left ON at all time while the product is being used. (refer to picture B)
- The product should be fully inflated.
- Ground support stakes are used for lawn ground surfaces. Hook and fit each provided ground stake through each loop in the bouncer. To prevent overturn or lift during playing, push stakes firmly into the soil. Make sure the hooked end of the stake is over the loop at all time during use. The stakes should be placed level with or under the ground in order to reduce tripping hazards. (refer to picture C)
- Please check the age recommendation and user weights(printed on the product) .You must not exceed the total weight for the product.
- Put the included play accessories if any for playing into the product. (refer to picture D,E)
- If the product comes with support cushions at the sides, do not stand or sit on the cushions.
Hint: Air leak from the seams is necessary because the product is inflated by constant air flow and this leakage is required to stop the product becoming over-inflated.
Hint: It is drawn user's attention to the orientation of the inflatable equipment installation in relation to the sun. The sliding surface of the product shall not face to the sun as sun shine can glare the children's eyes when they are sliding down along the slide.

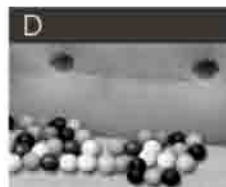

TAKE DOWN

 - Make sure all children exit the product.
- Make sure the product is free from foreign objects.
- If the product comes with water bags, like item #9082N, please follow the undermentioned instruction, otherwise, overleap this point. Detach the water bags from the product. Remove the product and blower before opening the stopple for draining. Empty water in the water bags and dry them in cool place for next time's use.
- Turn the blower (air pump) power switch to OFF.
- Unplug the blower (air pump) power cord.
- Loosen the Velcro and detach the inflation tube from the blower.
- The product should deflate on its own within 5 minutes. Make sure the product is entirely deflated. (refer to picture F)
- Remove ground support stakes.
- Fold the product in half from both ends, and then fold it in half 2 more times from both sides, vertically to the first fold. (refer to picture G,H,I)
- Roll it up tightly from the end opposite the inflation tube. (refer to picture J,K)
- Slip the carry bag over the folded product and stakes (plastic balls or water bags). Zip the bag. (refer to picture L)

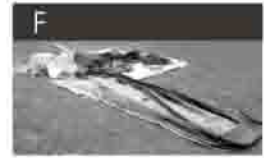

MAINTENANCE

- ▶ Checks and maintenance of the main parts of the toys should be carried out of regular intervals, if these checks are not carried out the toys could overturn or otherwise become a hazard. Whenever practical, the instructions shall also be affixed to the toy.
- ▶ The seasonal inspection and maintenance should be conducted for any damage or leakage of the product.
- ▶ If there is a puncture on the surface or other parts which are laminated PVC materials, please repair with the provided repair patches.
- ▶ If a part of the product needs repair other than the surface or those parts which are laminated PVC materials tears, you may repair by hand with a needle and strong household thread.
- ▶ The product can be wiped clean with a mild detergent. Keep water away from the blower (air pump) at all times.
- ▶ Do not store the product when wet. Store the product and the blower indoors in dry conditions when not in use.

 
happyhop® is a trademark of **Swiftech** Company Ltd.

©Copyright 2003 by **Swiftech** Company Ltd. All Rights Reserved. Made In China

Address: Dongcheng Industrial Zone, Xinping Road, Minzhong Town, Zhongshan City, Guangdong Province, China.

WARNING

- Failure to follow the specified instructions could result in serious injury.
- Keep the product a safe distance (at least 2 m) from fire, walls and other obstructions.
- The product may not be used outside in rainy and / or lightning conditions or if winds exceed 40km/h (25 MPH).
- The product must be fully inflated before any children are allowed inside. The product must stay fully inflated until everyone is out.
- If the product begins to deflate, remove all children and check for disconnection of power cord or for power outage.
- Do not drag on concrete or other rough surfaces.
- Unauthorized modification of the product is not allowed.
- Product should be checked regularly for potentially unsafe conditions such as damaged cord, plug, housing, or parts. If such damage is found, the product should not be used until properly repaired.
- To reduce the risk of fire or electric shock, do not use the blower with any solid-state speed control device.
- Check stakes regularly during playing to ensure they remain secure in the ground.
- The carry bag is not a TOY, but for storage use only.
- Adult set-up and dismantling are required. Adult supervision is required at all times while the product is in use.
- Ages and sizes of children playing in the product at the same time should be comparable. Not suitable for children under 3 years. Small parts may be swallowed. Never leave children unattended during playing.
- Keep children and pets away from the blower (air pump).
- Individuals with head, neck, back or other muscular-skeletal injuries or disabilities, small infants, pregnant women and others who may be susceptible to injury from falls, bumps or bouncing are not permitted in the product.
- Shoes, eyeglasses, jewelry and any hard or sharp objects that may cause injury must be removed before entering the product. Loose or baggy clothing or clothing containing long cords should not be worn whilst playing on this product.
- To prevent choking, children may not enter the product while eating, drinking, or chewing anything in their mouth.
- Children are required to slide down with proper posture (refer to the following pictures) when playing on the product with slide.

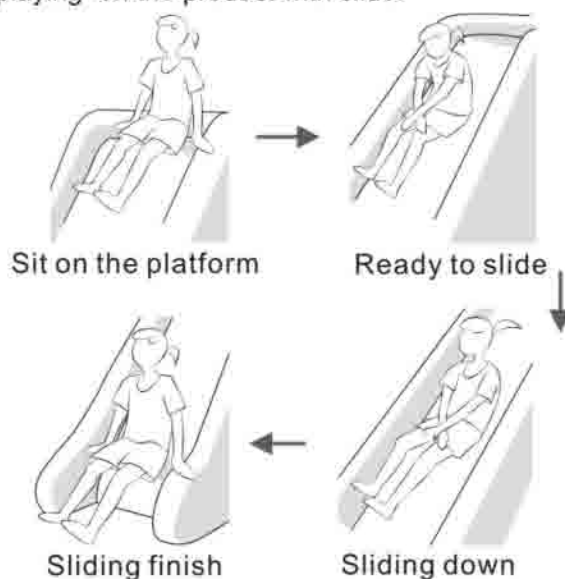

- No flipping, wrestling, running, or pushing is allowed inside the product.
- Do not bounce on the edges, steps. Climbing or hanging on the walls, netting or exterior of the product is not allowed.
- Changes to the original toy shall be carried out according to the instructions of the retailer of the original toy.
- In case of injury, contact a physician immediately.

BLOWER (AIR PUMP) INSTRUCTIONS

Read And Save These Instructions

WARNING!

Electrically Operated Product.
To Prevent Electric Shock, Keep Away From Water.
Use With Caution According To The Instructions.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

Blower (Air Pump) Specifications :

Area	Model	Electrical Rating	For Item No.	Model Purchased
Europe	W-2E	AC 220-240V, 50Hz, 320-330W, IP24B	9001,9001F,9001P,9002,9003,9004,9010,9017,9017N, 9017P,9018,9018N, 9040,9070,9072,9027N,9098,9104,9105,9111,9114,9140,9187,9201,9201P, 9202,9204, 9211,9213,9214,9220,9220B,9220N,9237,9304,9304B,9304N, 9304Y,9312,9314,9315,9320,9320B,9420,9420B	
	W-3E	AC 220-240V, 50Hz, 430-450W, IP24B	9007,9022,9023,9027,9029,9047,9047N,9049,9049N,9054,9054N, 9058,9083,9103,9103N,9112,9113,9117,9117N,9136,9160,9171, 9172,9236,9271,9313,9371,9360,9417,9506N	
	W-4E	AC 220-240V, 50Hz, 620-680W, IP24B	9014,9014N,9016,9021,9045,9060,9063,9064,9064N,9074,9082,9082N, 9106,9106N,9109,9139,9163,9164,9206,9212,9212N,9217,9217N,9406	

Blower (Air Pump)Warnings :

- The blower is a high-volume air pump. For use by a competent adult only.
- Never leave the blower (air pump) in an area where it will suck in dirt, leaves or other debris.
- Keep children away from the blower (air pump).
- To reduce the risk of fire or electric shock, connect only to an outlet provided with a residual current device.
- To reduce the risk of fire or electric shock, do not use the fan or blower (air pump) with any solid-state speed control device.
- Do not drop or strike the blower which may result in malfunction.
- Make sure the blower (air pump) " on/off " switch is in the off position before plug in.
- Set up as close to power source as possible.
- The product should be regularly checked for potentially unsafe conditions such as: damaged cord, plug, housing, or parts, and that if such damage is found, the product should not be used until properly repaired.
- Never leave the blower (air pump) outside in the rain or elements when not in use.
- This kind of air blower is mainly used to supply air for inflatable production.
- This blower is for household use only.

Disposal:

Do not dispose this product as unsorted municipal waste. Collection of such waste separately for special treatment is necessary.



Maintenance :

Keep blower (air pump) away from water. To clean, wipe with a moist cloth. The blower (air pump) does not require any lubrication and has no user-serviceable parts. Do not attempt to service the blower (air pump). When in use, do not place the cord across water, damp or traffic areas. When not in use, store the blower (air pump) upright on a stable surface and in dry conditions indoors. Loosely coil the cord and place it beside the blower (air pump).

Grounding instructions for all grounded, cord-connected products:

This product should be grounded. In case of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This product is furnished with a cord having a grounding wire with a right grounding plug. The plug must be plugged into an outlet that is properly installed and grounded according to all local codes and ordinances.

 
Danger:

Improper installation of the grounding plug can lead to an electric shock. Never use the appliance if the power cable is damaged because it represents a danger. It must be replaced by the manufacturer or service agent or a similarly qualified person in order to avoid a hazard. If repair or replacement of the cord or plug is necessary, do not connect the grounding wire to either flat blade end. The green wire (with or without yellow stripes) is the grounding wire. Check with a qualified electrician or serviceman if the grounding instructions are not fully understood, or if in doubt as to whether the product is properly grounded. Do not modify the plug provided; if it will not fit the outlet, have the proper installed by a qualified electrician.

Grounding Methods:

For a grounded, cord-connected product, rating less than 15 amperes and intended for use on the correct supply circuit, such instructions should be followed: This product is for use on the correct circuit, and has a grounding plug that looks like the plug illustrated in sketch A in Picture A. A temporary adapter that looks like the adapter illustrated in sketches B and C may be used to connect this plug to a 3-pole (2-pole) receptacle as shown in sketch B if a properly grounded outlet is not available. The temporary adapter should be used only until a properly grounded outlet (sketch A) can be installed by a qualified electrician. The green colored rigid ear, lug, or the like extending from the adapter must be connected to a permanent ground such as a properly grounded outlet box cover.

Picture A

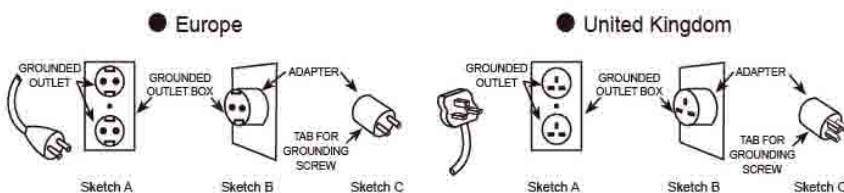

Keep children away



Keep away from water



Store in a dry place indoors



Never disassemble

DANCOVER[®]



Contact information

Head office:

Dancover A/S
Nordre Strandvej 119 G
3150 Hellebæk
Denmark

For more information
please visit:
www.dancovershop.com

National contact

Denmark: 70 26 76 20
denmark@dancover.com

UK: 020 8099 7570
uk@dancover.com

Germany: 041 0266 7040
germany@dancover.com

France: 0975 181 800
france@dancover.com

Sweden: 040 233 262
sverige@dancover.com

Finland: 0 931 581 720
suomi@dancover.com

Poland: 22 300 8602
polska@dancover.com

Luxembourg: +49 041 0266 7040
luxembourg@dancover.com

Portugal: 308 800 899
portugal@dancover.com

Spain: 911 436 828
espana@dancover.com

Italy: 02 479 21 198
italia@dancover.com

Switzerland: 0840 000125
schweiz@dancover.com

Austria: 0662 626935
austria@dancover.com

Norway: 231 00 690
norge@dancover.com

Nederland: 0 858 880 524
nederland@dancover.com

Ireland: 0 151 33 003
ireland@dancover.com

Belgium: 0 28 08 08 09
belgique@dancover.com