# DANCOVER®

Manual for


Turbine Vent f/Orangery

3,04x2,63x2,73m

### Optional

#### **Turbine vent is optional**

- \* Remove hexagonal ridge cone firstly.
- \* Assemble open-close disc #7993 on hexagonal bracket by using short M6 bolt #a1 instead of long #a24.
- \* Attach turbine vent on roof corner bars by carefully using self-drilling tapping screws #a18 which will bore into aluminium or plastic.
- \* Adjust open-close disc #7993 to make it work or not.

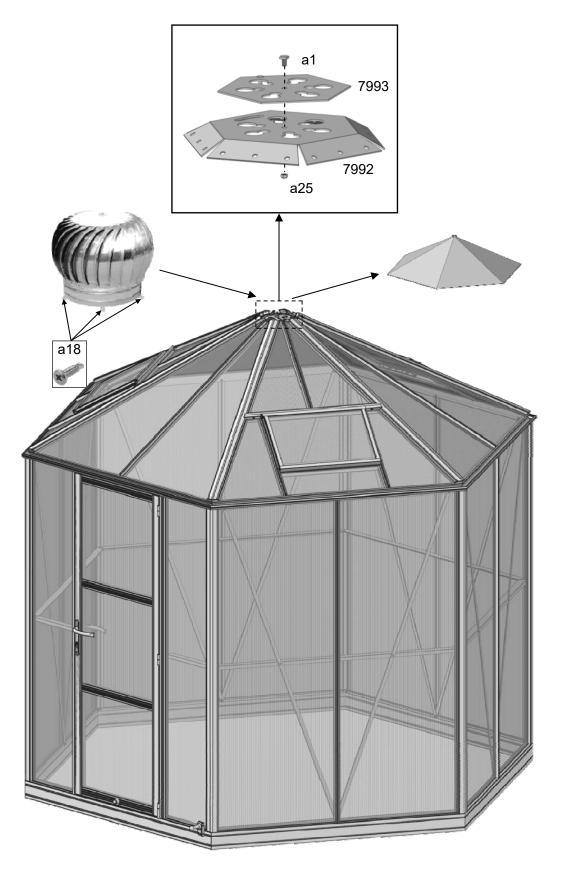

## DANCOVER



#### Contact information

Austria



Belgium



Croatia



Denmark



Estonia



Finland



France



Germany



Ireland



Italy



Latvia



Lithuania



Nederland



Norway



Poland



Portugal



Spain



Sweden



Switzerland



UK

