
# DANCOVER®

Manual for Retractable barrier w/strap

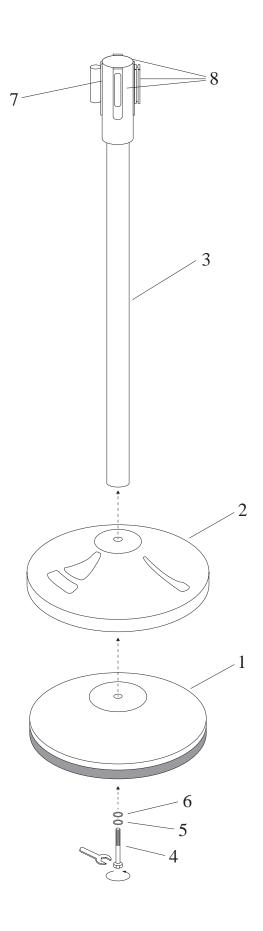

## Name list of the parts

- 1. base
- 2. base cover
- 3. pole
- 4. screw
- 5. ring
- 6. washer
- 7. retractable belt
- 8. the "ear" parts

### **Cautions**

- Please make sure that the base is steady and the product is fixed well.
- Pull out and retract the belt tenderly to avoid getting hurt by the belt or deformation of the belt.

# **Assembly Instructions**

- 1. Put the base cover (2) on the base (1).
- 2. Fix the pole (3) on the base by screw (4) ring (5) and washer (6), then fasten with your spanner.
- 3. Pull out the retractable belt and connect it to the "ear" part (8) or another product.

# DANCOVER®

### Contact information

Head office:

Dancover A/S Nordre Strandvej 119 G 3150 Hellebæk Denmark For more information please visit: www.dancovershop.com

### National contact

Denmark: 70 26 76 20

denmark@dancover.com

UK: 020 8099 7570 uk@dancover.com

Germany: 041 0266 7040 germany@dancover.com

France: 0975 181 800 france@dancover.com

Sweden: 040 233 262 sverige@dancover.com

Finland: 0 931 581 720 suomi@dancover.com

Poland: 22 300 8602 polska@dancover.com

Luxembourg: +49 041 0266 7040

luxembourg@dancover.com

Portugal: 308 800 899 portugal@dancover.com

Spain: 911 436 828

espana@dancover.com

Italy: 02 479 21 198 italia@dancover.com

Switzerland: 0840 000125 schweiz@dancover.com

Austria: 0662 626935 austria@dancover.com

Norway: 231 00 690 norge@dancover.com

Nederland: 0 858 880 524 nederland@dancover.com

Ireland: 0 151 33 003 ireland@dancover.com

Belgium: 0 28 08 08 09 belgique@dancover.com