
DANCOVER®

Manual
for
Ventilation Window for
Greenhouse TITAN Arch 90/130



DISCRIPTION

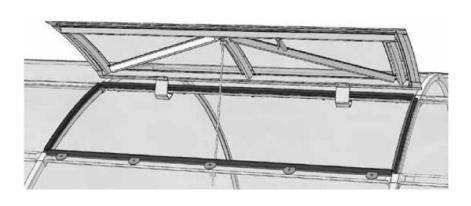

Follow the greenhouse assembly instructions and use it in strict accordance with the manual and operating rules stated in the technical certificate. Please keep the technical certificate for further reference.

The vent is designed to ventilate the greenhouses. It is installed in the greenhouses with profile bearers TITAN Arch 90 and TITAN Arch 130 with 1 m arc interval. The frame of the vent sash is made of galvanized steel and it is assembled with screws and nuts. The covering of the vent is cut out of the greenhouse polycarbonate. The kit part of the vent includes all necessary elements of clamps.

Warranty liability

- 1. The manufacturer bears responsibility for the vent complete setup.
- 2. The manufacturer bears responsibility for the vent assemblability in accordance with the manual
- 3. Claim submission period is 12 months from the date of the purchase

Warranty conditions

Warranty liabilities do not apply to the cases of:

- 1. the vent installation with violation of requirements of the manual
- 2. the violation of the operating rules
- 3. hurricanes and other natural disasters.

Kitting of parts for assembly.


1st package									
	mar-	name title		length, mm		quantity,			
Nº	king			TITAN Arch 90	TITAN Arch 130	pcs.			
1	1		long assembly part	951		2			
2	2		arc	297		3			
3	3	9	diagonal axis	492		2			
4	-		Vertical batten	331		2			
5	-		horizontal batten	1013		2			
6	-		fold	295		1			
7	-		Strip	981	986	2			
_ ′				411	405	2			

2nd package								
NIO		quantity, pcs.						
Nº	na	TITAN Arch 90	TITAN Arch 130					
1		locking pipe		1				
2		corbel piece	2					
3	0	washer 4x32	11	1				
4	0	washer 5x32	-	10				
5		Screw M4x8	29	25				
6		Screw M4x10	20	20				
7		Screw M4x25	10	-				
8		Screw M4x50	1	1				
9		Screw M5x10	-	4				
10		Screw M5x35	-	10				
11		Screw M5x45	2	2				
12	0	nut M4	61	47				
13		nut M5	-	14				
14	0	jam nut M5	2					
15		stay bearing		2				
16	~	support bearing	2					
17	2000000	Window security chain	1					
18		Scotch tape 25 mm		1				


The manufacturer reserves the right for vent engineering design changes.

3

Drill out four bores in the uppermost bearer, holding the piece 1 to the centre of the bearer.

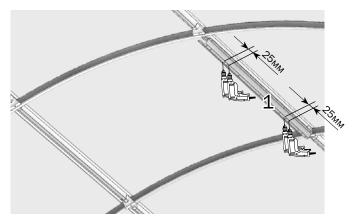


Cut out polycarbonate on as per inner contour of the vent frame. Install the stay bearings in the uppermost bearer.

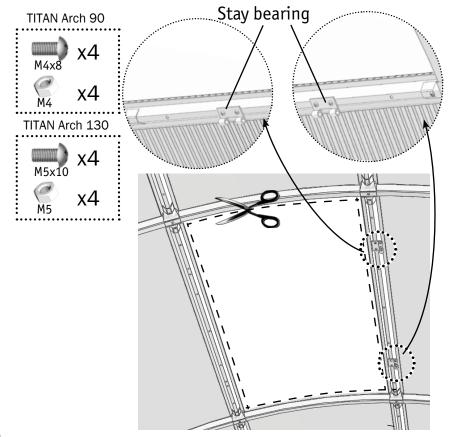


Install the strip on perimeter of the cut of the greenhouse, engaging it on the edge of the polycarbonate. The edges of the weather strip should be expelled out of the cut to drain the rainwater. Cut the hard part of the projecting edge to do it





Install the washers on as per inner contour of the opening but previously drill out the bores in bearers.

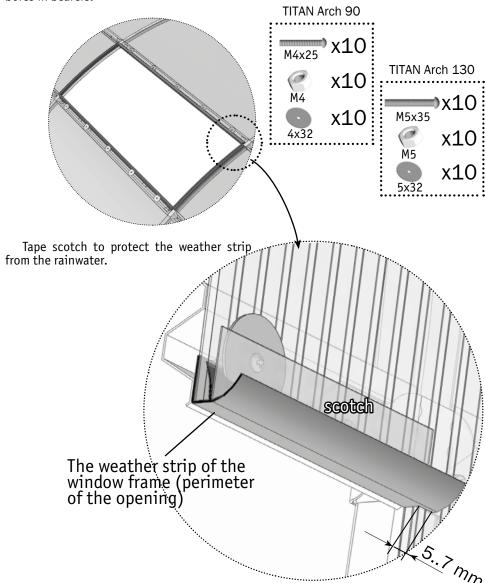


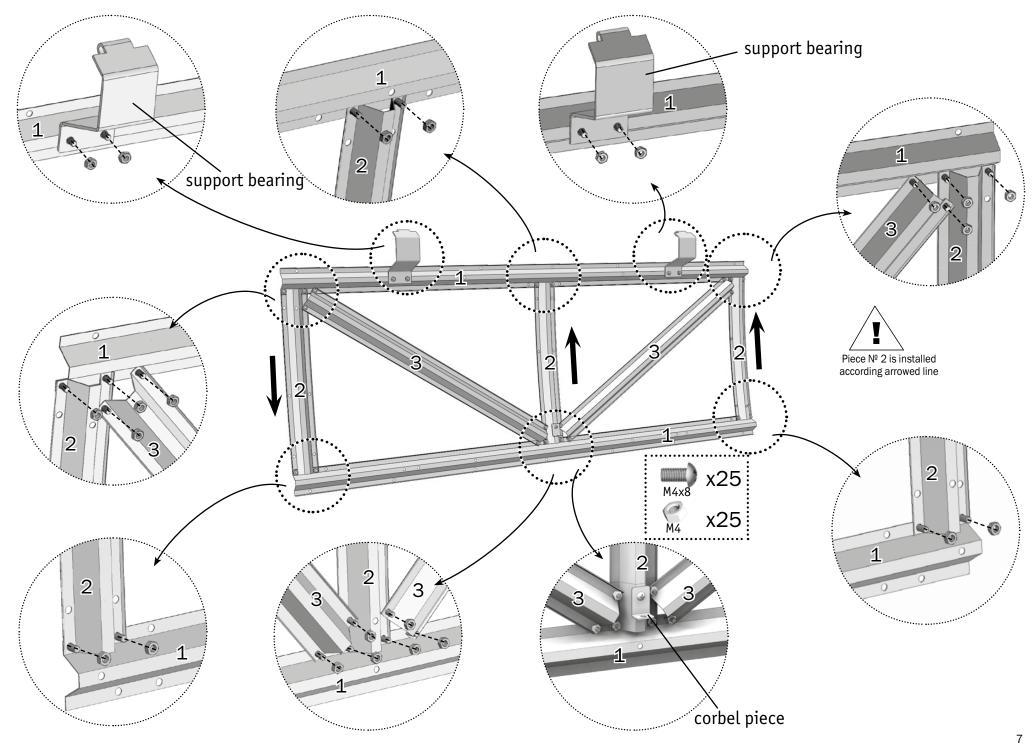


Overlap the cut piece of polycarbonate on the assembled frame of the vent and edge it. Don't forget about the offset.

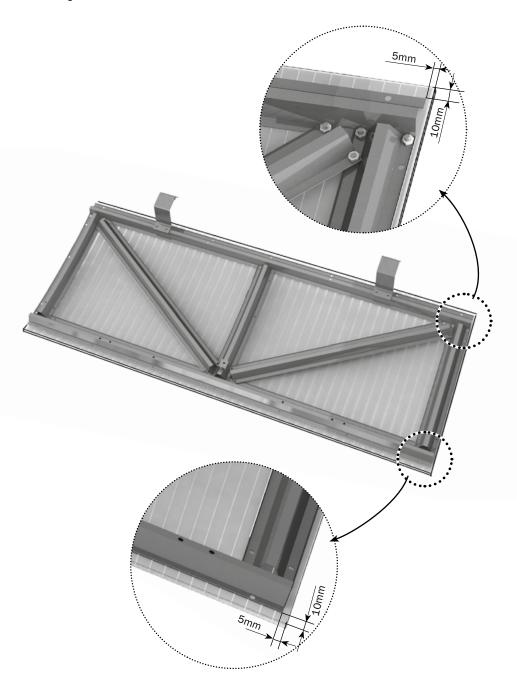

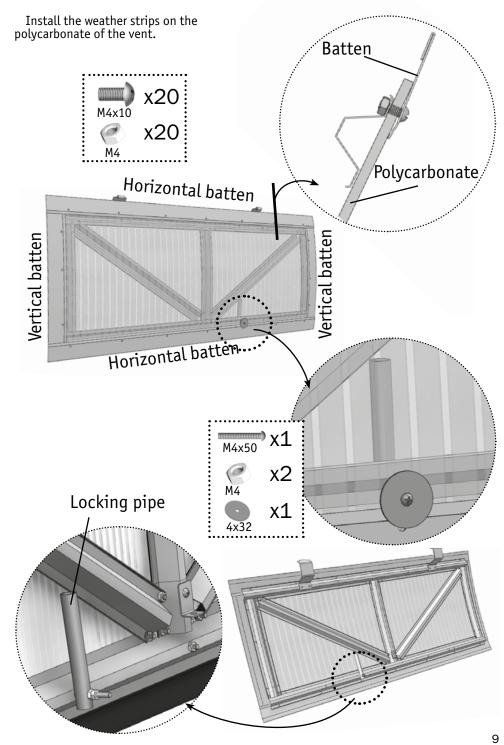

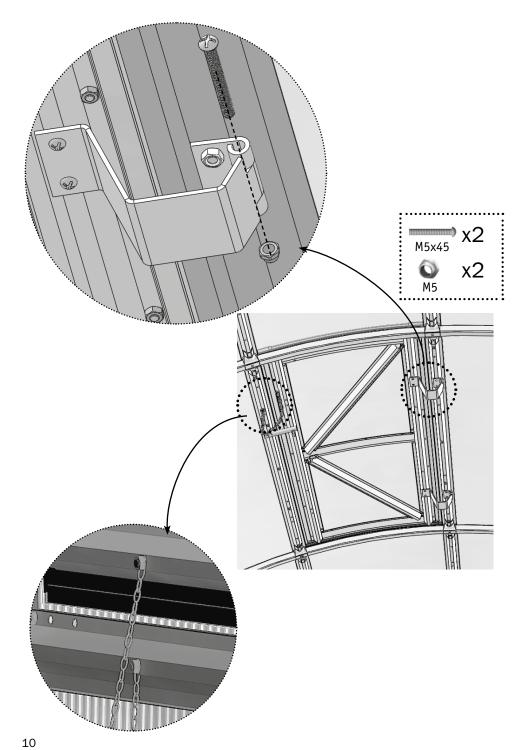

The window security chain is fastened with screws and keeps the vent during the gusts of wind.

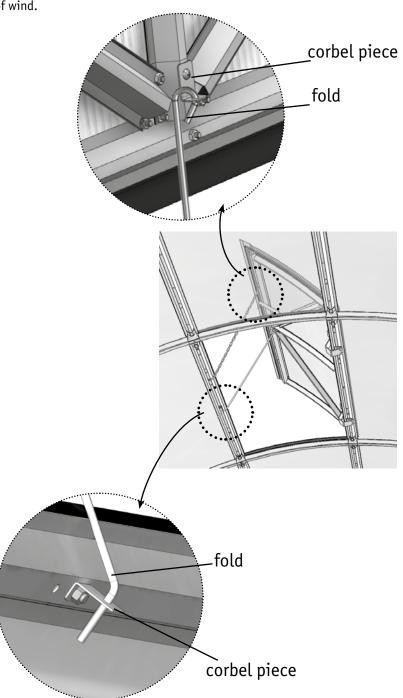

11

DANCOVER



Contact information

Austria



Belgium



Croatia



Denmark



Estonia



Finland



France



Germany



Ireland



Italy



Latvia



Lithuania



Nederland



Norway



Poland



Portugal



Spain



Sweden



Switzerland



UK

