# DANCOVER®

Manual for Retractable Tunnel 2x10,3x2,2m

# **TABLE OF CONTENTS**

1.	GENERAL INFORMATION	3
1.1	Introduction	3
2.	BOX DESCRIPTION AND TECHNICAL SHEET	4
2.1	General description	4
2.2	Components	5
2.3	Fabric's characteristics	7
3.	INSTALLATION	8
3.1	Handling and transport	8
3.2	Place and requirements for the installation	8
3.3	Installation	9
3.3	.1 Package opening	9
3.3	.2 Box installation	9
4.	BOX UTILIZATION	.11
5.	CHECKS AND MAINTENANCE	12
6	DISASSEMBLY	12

#### 1. GENERAL INFORMATION

#### 1.1. Introduction

This manual is an integral part of the product; it is addressed to the installer and to the final user of the box, and enables a correct installation and use. For this reason it must be hold with the box until proper disposal.

In this manual you will find the instructions to:

- correctly install the box
- understand the functions of the box and of every of the whole thereof
- correctly do the box scheduled maintenance processes
- take care of the basic safety rules



**ATTENTION:** the installer and the final user must read the whole manual, and store it together with the box.

Before using the box, please read carefully the technical information contained in this manual and follow them strictly.

Keep this manual in a safe and accessible place.

#### 2. BOX DESCRIPTION AND TECHNICAL SHEET


#### 2.1. General description


The box must be used only as an ordinary protection cover, for purely temporary use. In case of bad weather conditions (wind, snow), the box must be removed. Given that the box cannot be fixed to the ground - but only bound to it - its use in these conditions can cause damages to people and things.

It is particularly important for safety not to hang or apply any type of load at the structure or at the top cover of the box.

In particular, children must not handle the snails. The failure to respect the conditions of use and warnings immediately voids the warranty.

#### BOX TUNNEL / BOX TUNNEL €CO

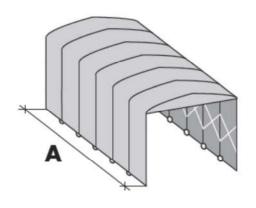

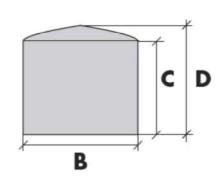



**A(cm):** 412/515/618/721/824/...

**B (cm):** 250/280/300

C (cm): 185/200/205

#### **STADIO BOX**

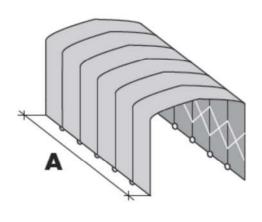

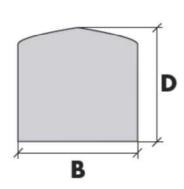

**A (cm):** 412/515/618/721/824/...

**B (cm)**: da 150 a 300


**D (cm):** da 180 a 240


<u>NB.</u> Starting from the length (A) of cm 700 (only for mobile version): eyelets placed on the lateral profile for ground-fixation through straps and stakes/ballasts (not supplied by the supplier)

#### 2.2. Components

<u>N.</u>	DESCRIPTION
1	ALUMINIUM PROFILE MM 40x35
2	PVC LG 550/STARPOL ECO TOP COVER
3**	WINDOW IN MICRO-PERFORATED MATERIAL
4**	PVC GABLE END WITH WINDOW IN MICRO-PERFORATED MATERIAL
5*	PVC BUCKLE
6*	STRING FASTENER HANDLE IN PVC
7*	NYLON STRING DIAM. MM 5
8*	GROUND-FIXING BRACKETS (base v.), CARABINER (mobile v.)
9	CROSSES CM 120X120 (in the mobile v. includes also tension bar)
10*	TENSION BARS
11*	PVC SLIDING CURTAIN
12*	PVC WALL WITH WINDOW IN MICRO-PERFORATED MATERIAL
13*	ALUMINIUM CROSSBEAM
14*	GROUND-FIXING BRACKETS* (base v.), NYLON WHEELS (mobile v.)

<sup>\*</sup>Only for Box Tunnel and Box Tunnel Eco \*Only for Box Tunnel

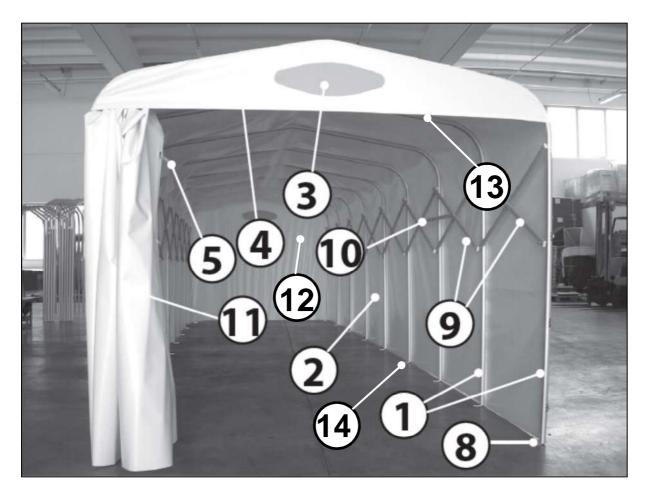

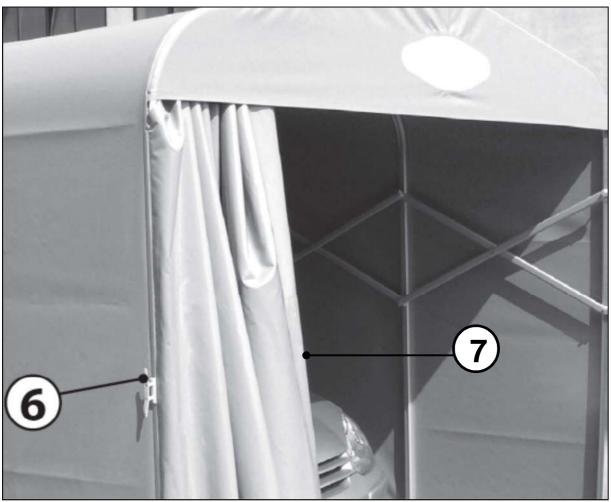

#### 2.3. Fabric's characteristics

#### POLY LG 550/LAC 2L FLAME-RETARDANT

**BOX TUNNEL - STADIO BOX** 

Yarn Warp: 100% PES 1100 Dtex

Weft: 100% PES 1100 Dtex

Fabric's weight 550 gr/m<sup>2</sup>

**Characteristics** ABUV

**Finishing** gloss lacquered

Breaking strength Warp: ca 250 DaN/5 cm

(DIN 53354) Weft: ca 180 DaN/5 cm

Tear strength Warp: 25 DaN

(DIN 53363) Weft: 20 DaN

Grip (IVK/PKT 14) 10 DaN/5 cm

Temperature resistance +70° C/- 30° C

Light resistance (DIN 53388)

Level: 7/8

Fire-proofing ADR cl. II

#### STARPOL ECO

**BOX TUNNEL ECO** 

Yarn Warp:100% PES/1100 Dtex

Weft:100% PES/1100 Dtex

Fabric's weight Ca 610 gr/m<sup>2</sup>

**Finishing** PVC coated

Breaking strength Warp: ca. 235 DaN/5 cm

(DIN 53354) Weft: ca. 220 DaN/5 cm

Tear strength Warp: ca. 23 DaN (DIN 53363) Weft: ca. 22 DaN

**Grip (DIN 53357)** 9 DaN/5 cm

Temperature resistance +70° C /- 30° C

#### 3.INSTALLATION

#### 3.1. Handling and transport

The box installation should only be done by qualified staff.

The products must be unloaded through appropriate lifting equipment, which must be used only by authorized staff.

If the unloading operation is made by hand, it is important to consider that the weight limit that each male person can handle is 25 Kg; moreover, the operators should be equipped with gloves and safety shoes.

#### 3.2. Place and requirements for the installation

Before the arrival of the installers the user must arrange:

- any permits required by local regulations
- · appropriate ground

#### 3.3. Installation

Before starting the installation, if electrical equipment utilization is needed:

- make sure you do not work in wet areas
- · use only intact extension cords, according to the place of use
- use shoes with rubber soles



<u>ATTENTION:</u> It is necessary for the operators to use appropriate personal protective equipment such as safety shoes and gloves, in order to avoid injuries provoqued by the fall of the packaging or of components that it contains, perforation and cutting due to cutting or hanging parts

#### 3.3.1. Package opening

Packaging must be opened only with scissors with rounded tips, using the best care not to cut the cloth of the article (Photo 1).



**NOTE:** The packaging material disposal is at user's charge, who will perform it in accordance with existing environmental norms.

#### 3.3.2 Box installation

The sliding door must be opened (photo 2) and the screws of the <u>lower part</u> of the crosses must be released with an Allen key (photo 3).



<u>ATTENTION:</u> if the screws in the crosses top are released, it can provoque serious damages to the structure and to the cloth of the box. The supplier is not responsible for this kind of damages.





Subsequently, the box must be opened by pushing the crosses from the bottom to the top (photo 4/a and 4/b).



Н 0 Т 0 4/A



The top cover must be stretched:

- BASE VERSION: using the stretching device (not included) and tightening the screws of the lower part of the crosses (photo 5/a, 5/b and 5/c)
- MOBILE VERSION: putting the tension bars in regular position, at 180° (photo 6/a and 6/b); through the regulation of the tensor screws, there will be a better top cover tensioning




Н 0 T 0 5/A



5/B

10

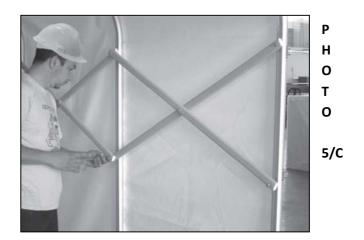





In case of solid rubber wheels, the structure must be lifted up, then the wheel plate must be inserted in the profile (one wheel each 2 profiles) and the nut must be tied (photo 7-8-9-10)





11

Ρ

Н


0

Т

0

6/B



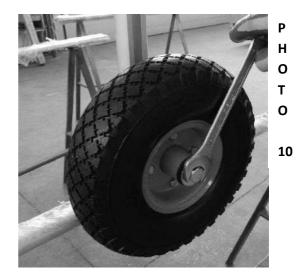

Finally, the box can be fixed to the basement through appropriate anchorage systems.



**ATTENTION:** other installation ways which are not contained in this manual are not allowed, if not previously authorized.



<u>ATTENTION:</u> the box must be fixed to the ground of to a wall. The installer must verify the ground type and conditions and choose the appropriate anchoring system, also considering the typical meteorological conditions of that particular place (strong wind,...).

#### **4.BOX UTILIZATION**

Before using the box you need to check that installation and the ground fixation operations have been carried out properly.

#### **5.CHECKS AND MANTAINANCE**

It is necessary to periodically check the general status of the structure, of the links between components, of the hinges and the top cover. In case of holes or tears in the fabric, damages or cracks of metal components, it is necessary to contact the dealer.

The top cover can be washed with neutral detergent and then rinsed with water. After cleaning, the fabric must be dried before being folded, in order to prevent mold.

# **6.DISASSEMBLY**

Disassembling operations are done backward to the assembly.

The eventual disposal of the box must be made in accordance with the existing environmental norms.

# DANCOVER®

# Contact information

Head office:

Dancover A/S Nordre Strandvej 119 G 3150 Hellebæk Denmark For more information please visit: www.dancovershop.com

### National contact

Denmark: 70 26 76 20 denmark@dancover.com

UK: 020 8099 7570 uk@dancover.com

Germany: 041 0266 7040 germany@dancover.com

France: 0975 181 800 france@dancover.com

Sweden: 040 233 262 sverige@dancover.com

Finland: 0 931 581 720 suomi@dancover.com

Poland: 22 300 8602 polska@dancover.com

Luxembourg: +49 041 0266 7040

luxembourg@dancover.com

Portugal: 308 800 899 portugal@dancover.com

Spain: 911 436 828

espana@dancover.com

Italy: 02 479 21 198 italia@dancover.com

Switzerland: 0840 000125 schweiz@dancover.com

Austria: 0662 626935 austria@dancover.com

Norway: 231 00 690 norge@dancover.com

Nederland: 0 858 880 524 nederland@dancover.com

Ireland: 0 151 33 003 ireland@dancover.com

Belgium: 0 28 08 08 09 belgique@dancover.com